


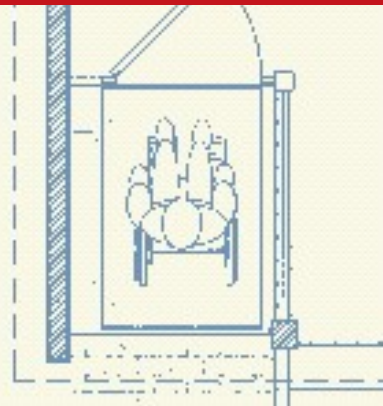


3

Adding
Elevators *or* **Lifts**



Adding Elevators *or* Lifts

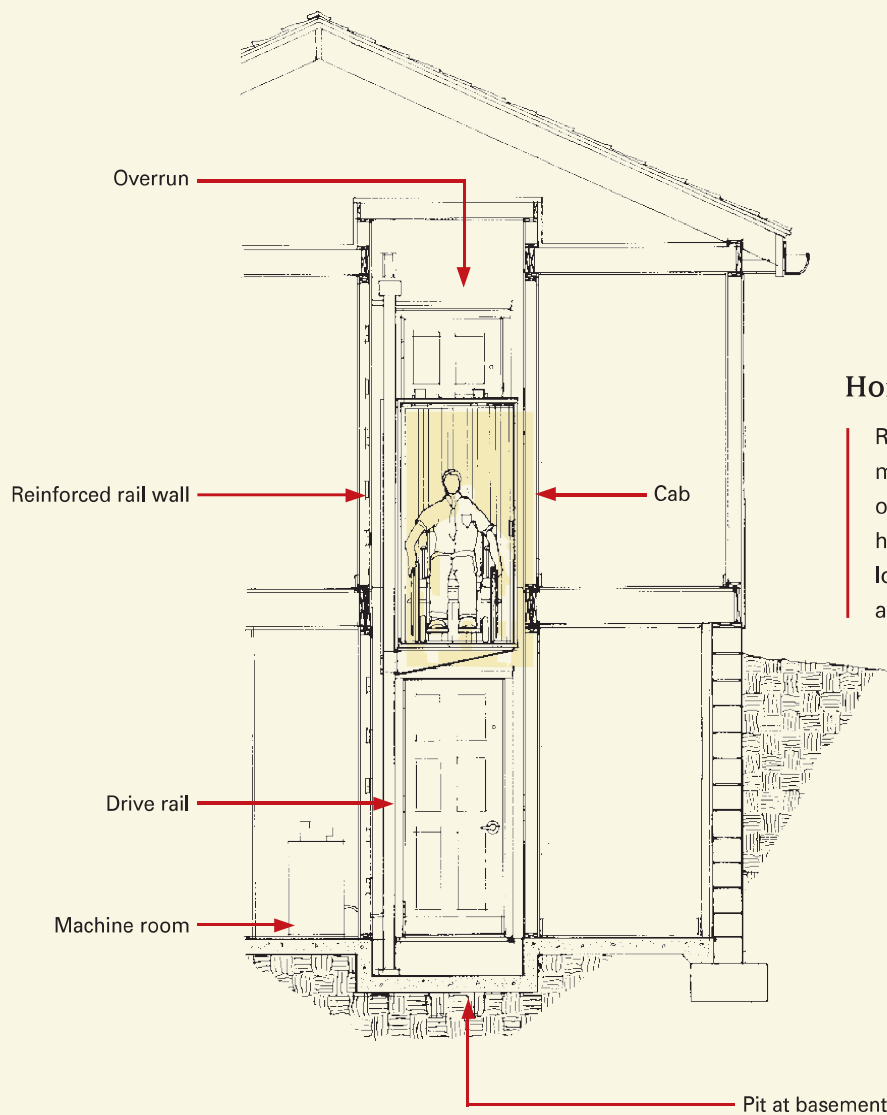

Home Elevator

Residential elevator shafts can penetrate multiple floor levels with a travel distance of up to 55 feet. The space above the highest stop is called an "overrun." At the lowest level, a shallow "pit" is required to accommodate the platform frame.